
HC-05

1. Overview:

This module supports UART, USB, SPI, PCM, SPDIF and other interfaces, and supports SPP Bluetooth serial port protocol, which has the advantages of low cost, small size, low power consumption, high sensitivity of sending and receiving.

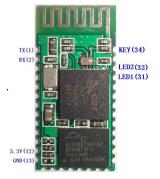

2. Feature

Bluetooth V2.0+EDR Bluetooth Class 2 Built-in PCB RF antenna Built-in 8Mbit Flash Support SPI programming interface Support UART, USB, SPI, PCM and other interfaces Support master and slave Support software control master-slave module 3.3V power supply Passed REACH, ROHS certification

3. Application areas:

Bluetooth car handsfree Bluetooth GPS Bluetooth PCMCIA, USB Dongle Bluetooth wireless data transmission; Industrial remote control, telemetry; POS system, wireless keyboard, mouse; Traffic, underground positioning, alarm; Automated data acquisition system; Wireless data transmission; banking system; Wireless data collection; Building automation, security, wireless monitoring co

Building automation, security, wireless monitoring of equipment room, access control system;

Smart home, industrial control; Vehicle inspection equipment; Interactive program voting equipment for television stations; Government street lamp energy saving equipment Wireless LED display system Bluetooth joystick, Bluetooth gamepad Bluetooth printer Bluetooth remote control toy

4. Physical characteristics:

Operating Frequency Band	2.4GHz ISM band
Bluetooth Specification	V2.0+EDR
Output Power Class	Class 2
Operating Voltage	3.3V
Host Interface	USB 1.1/2.0 or UART
Audio Interface	PCM interface
Flash Memory Size	8Mbit
Dimension	27mm (L) x 13 (W) mm x 2mm (H)

5. Electrical characteristics:

Absolute Maximum Ratings		
Rating	Min	Max
Storage temperature	-40 ℃	+150 ℃
Supply voltage: VBAT	-0.4V	5.6V
Other terminal voltages	VSS-0.4V	VDD+0.4V


Recommended Operating Conditions			
Operating Condition	Min	Max	
Operating temperature range	-40°C	+150 ℃	
Guaranteed RF performance range ^(a)	-40°C	+150 ℃	
Supply voltage: VBAT	2.2V	4.2V ^(b)	

6. Power consumption:


Operation Mode	Connection Type	UART Rate(kbps)	Average	Unit
Page scan	-	115.2	0.42	mA
ACL No traffic	Master	115.2	4.60	mA
ACL With file transfer	Master	115.2	10.3	mA

ACL 1.28s sniff	Master	38.4	0.37	mA
ACL 1.28s sniff	Slave	38.4	0.42	mA
SCO HV3 30ms sniff	Master	38.4	19.8	mA
SCO HV3 30ms sniff	Slave	38.4	19.0	mA
Standby Host connection	-	38.4	40	μΑ

7. Functional block diagram:

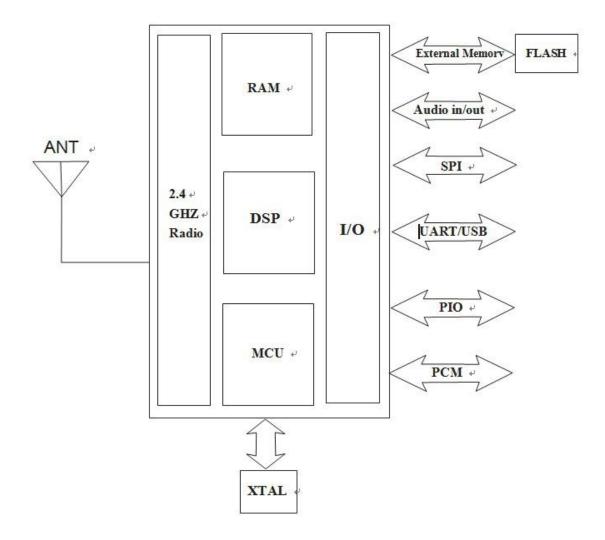

8. Application circuit diagram:

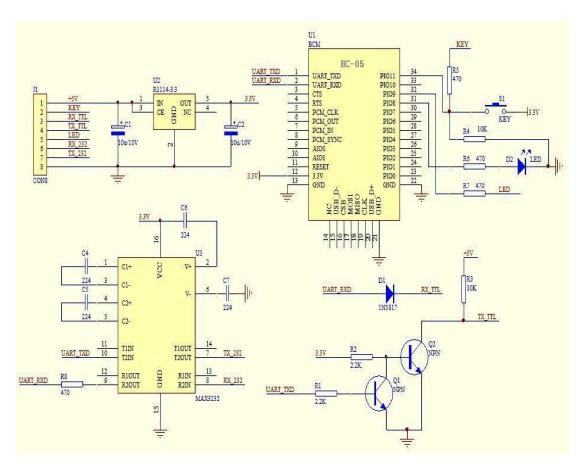


9. Pin function description:

PIN	NAME	TYPE	Function
1	UART-TX	CMOS output	Serial data output
2	UART-RX	CMOS input	Serial data input
3	UART-CTS	CMOS input	Serial port clear send
4	UART-RTS	CMOS output	Serial port request to send
5	PCM-CLK	Two way	PCM clock
6	PCM-OUT	CMOS output	PCM data output
7	PCM-IN	CMOS input	PCM data input
8	PCM-SYNC	Two way	PCM data synchronization
9	AIO(0)	Two way	Programmable analog input and output
10	AIO(1)	Two way	Programmable analog input and output
11	RESETB	CMOS input	Reset/reset button
12	3.3V	power input	+3.3V power supply
13	GND	Ground	Ground
14	NC	Output	NC (please hang)
15	USB-DN	Two way	USB data negative

10		CMOC insut	CDI shin salast	
16	SPI-CSB	CMOS input	SPI chip select	
17	SPI-MOSI	CMOS input	SPI data input	
18	SPI-MISO	CMOS output	SPI data output	
19	SPI-CLK	CMOS input	SPI clock port	
20	USB-DP	Two way	USB data is positive	
21	GND	Ground	Ground	
22	GND	Ground	Ground	
23	PIO(0)	Two way	Programmable input/output port (0)	
24	PIO(1)	Two way	Programmable input/output port (1)	
25	PIO(2)	Two way	Programmable input/output port (2)	
26	PIO(3)	Two way	Programmable input/output port (3)	
27	PIO(4)	Two way	Programmable input/output port (4)	
28	PIO(5)	Two way	Programmable input/output port (5)	
29	PIO(6)	Two way	Programmable input/output port (6)	
30	PIO(7)	Two way	Programmable input/output port (7)	
31	PIO(8)	Output	Status indicator LED port 1	
32	PIO(9)	Output	Status indicator LED port 2	
33	PIO(10)	Two way	Programmable input/output port (10)	
34	PIO(11)	Input	Module state switching pin, High level -> AT command responds to working status; Low level or floating -> Bluetooth normal working status.	

10. Dimensions:

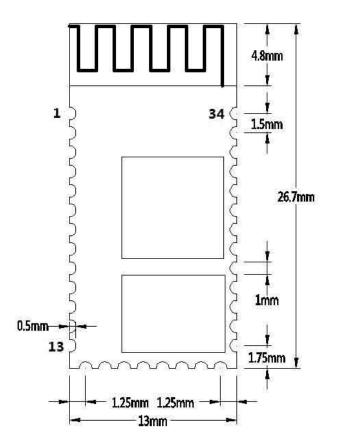

11. Serial port module pin definition:

1. PIO(8) connects to the LED to indicate the working status of the module. The module flashes after power-on, and the different states flash differently.

2. PIO (9) is connected to the LED to indicate that the module is successfully connected. After the Bluetooth serial port is successfully connected, the LED is on.

3. PIO (11) module state switching pin, high level --> AT command response working state, low level or floating --> Bluetooth normal working state.

4. The reset circuit is already on the module and reset when the power is turned back on.

12. Steps to set the master mode:

1. PIO (11) is set high.

2. Upon power-on, the module enters the AT command response state.

3. HyperTerminal or other serial port tool, set baud rate 38400, data bit 8 bits, stop bit 1 bit, no parity bit,

No flow control.

4. The serial port sends the character "AT+ROLE=1 $r\n$ " and successfully returns "OK $r\n$ ", where $r\n$ is a carriage return line feed.

5. PIO (11) is de-asserted, re-powered, the module is the main module, and the slave module is automatically searched to establish a connection.

13. LAYOUT considerations

1. BLK-MD-HC-05 Bluetooth module serial port level needs 3.3V, if you connect with 5V level system, you need to add level conversion chip.

2. Bluetooth signals are greatly affected by the surrounding, such as trees, metal, walls and other obstacles will absorb or shield the Bluetooth signal, so it is not recommended to install in the metal casing.

3. Since the metal will weaken the antenna function, it is recommended that when the module is given to the Lay board, the ground under the module antenna should not be laid and routed. It is best to hollow out.

AT instruction set

The BLK-MD-HC-05 embedded Bluetooth serial communication module has two working modes: command response working mode and automatic connection working mode. In the automatic connection working mode, the module can be divided into master, slave and loopback three working roles.

When the module is in the automatic connection working mode, it will automatically transfer data according to the preset setting; when the module is in the command response working mode, it can execute all the AT commands described below, and the user can send various AT commands to the module as modules. Set control parameters or issue control commands. The dynamic conversion of the module's operating state can be achieved by controlling the input level of the module's external pin (PIO11).

The pin definition used by the serial port module:

1. PIO8 is connected to the LED to indicate the working status of the module. The module flashes after power-on, and the different states flash differently.

2. PIO9 is connected to the LED to indicate that the module is successfully connected. After the Bluetooth serial port is successfully connected, the LED is on.

3. PIO11 module status switching pin, high level --> AT command response working status, low level or floating --> Bluetooth routine

State.

4. The reset circuit is already on the module and reset when the power is turned back on.

Steps to set up as the main module:

1. PIO11 is set high.

2. Upon power-on, the module enters the AT command response state.

3. HyperTerminal or other serial port tool, set baud rate 38400, data bit 8 bits, stop bit 1 bit, no parity bit,

No flow control.

4. The serial port sends the character "AT+ROLE=1 $r\n$ " and successfully returns "OK $r\n$ ", where $r\n$ is a carriage return line feed.

5. PIO is set low, power is turned back on, the module is the main module, and the slave module is automatically searched to establish a connection.

Detailed instructions

(AT commands are not case sensitive and end with carriage return, newline characters: \r\n)

1. Test instructions:

Command	Response	Parameter
AT	OK	/

2. Module reset (restart):

Command	Response	Parameter
AT+RESET	OK	/

3. Obtain the software version number:

Command	Response	Parameter
AT+VERSION?	+VERSION: <param/>	Param: Software version
AITVERSION?	OK	number

for example: At+version?\r\n +VERSION:2.0-20100601 OK

4. Restore default state:

Command	Response	Parameter
AT+ORGL	ОК	/

Factory default state:

- 1. Equipment class: 0
- 2. Search code: 0x009e8b33
- 3. Module Job Role: Slave Mode
- 4. Connection mode: Specify the dedicated Bluetooth device connection mode
- 5. Serial Port Parameter: Baud Rate 38400bits/s; Stop Bit: 1 bit; Check Digit: /
- 6. Pairing code: "1234"
- 7. Equipment name: "H-C-2010-06-01"

... ...

5. Get module Bluetooth address:

Command	Response	Parameter
AT+ADDR?	+ADDR: <param/> OK	Param: Bluetooth address

Bluetooth address representation method: NAP: UAP: LAP (hexadecimal) for example:

The module Bluetooth device address is: 12:34:56:ab:cd:ef At+addr?\r\n +ADDR:1234:56:abcdef OK

6. Set/query device name:

Command	Response	Parameter
AT+NAME= <param/>	OK	
	1. +NAME: <param/>	Param:Bluetooth device name
AT+NAME?	OK——Success	Default name:"HC-05"
	2. FAIL——Failure	

E.g:

AT+NAME=HC-05\r\n ——Set the module device name: "HC-05" OK AT+NAME="HC-05"\r\n - Set the module device name to "HC-05" OK At+name=Beijin\r\n ——Set the module device name: "Beijin" OK At+name="Beijin"\r\n - Set the module device name to "Beijin" OK At+name?\r\n +NAME: Bei jin OK

7. Get the remote Bluetooth device name:

Command	Response	Parameter
	1. +NAME: <param2></param2>	Param1: Remote Bluetooth
AT DNAME9 Charges 1	OK——Success	device address
AT+RNAME? <param1></param1>	2. FAIL——Failure	Param2: Remote Bluetooth
		device address

Bluetooth address representation method: NAP: UAP: LAP (hexadecimal) E.g:

The module Bluetooth device address is: 00:02:72:od:22:24, the device name is: Bluetooth

At+rname? 0002,72,od2224\r\n +RNAME: Bluetooth OK

8. Setup / Query - Module Role:

Command	Response	Parameter
AT+ROLE= <param/>	OK	Param:Parameter takes the
AT+ ROLE?	+ ROLE: <param/>	following values:

OK	0 - from the role (Slave)
	1 - Master role (Master)
	2 - Loopback role
	(Slave-Loop)
	Default: 0

Module role description:

Slave - passive connection;

Slave-Loop - passive connection, receiving remote Bluetooth master data and returning the data to the remote Bluetooth master as it is;

Master - Query the surrounding SPP Bluetooth slaves and initiate a connection to establish a transparent data transmission channel between the master and slave Bluetooth devices.

Command	Response	Parameter
AT+CLASS= <param/>	OK	Param:Parameter takes the
	1. + CLASS: <param/>	following values:
	OK——Success	Param: Equipment class
	2. FAIL——Failure	The Bluetooth device class is
		actually a 32 bit
		Parameter, the Parameter is
AT+ CLASS?		used to indicate the device
		class
		Type, and the type of service
		supported.
		Default: 0

9. Settings / Query - Device Class:

In order to effectively filter the surrounding Bluetooth devices, quickly query or query the custom Bluetooth device, the user can set the module to a non-standard Bluetooth device class, such as: 0x1f1f (hexadecimal).

10. Device / Query - Query Access Code:

Command	Response	Parameter
AT+IAC= <param/>	1. OK——Success	Param: Query access code
	2. FAIL——Failure	Default: 9e8b33
		See Appendix 2 for specific
	+IAC: <param/>	settings: Query Access Code
AT+ IAC?	ОК	Description

The access code is set to GIAC (General Inquire Access Code: 0x9e8b33) general query access code, which can be used

Discovered or found all Bluetooth devices around; in order to efficiently query or be queried in many Bluetooth devices around

Customize the Bluetooth device, the user can set the module query access code to a number other than GIAC and LIAC, such as: 9e8b3f. Example: AT+IAC=9e8b3f\r\n OK AT+IAC?\r\n +IAC: 9e8b3f OK

11. Settings / Query - Query Access Mode:

Command	Response	Parameter
AT+INQM= <param/> , <param2>,</param2>	1. OK——Success	Param: Query mode
<param3></param3>	2. FAIL——Failure	0-inquiry_mode_standard
	+INQM: <param/> , <param2>,</param2>	1inquiry_mode_rssi
	<param3></param3>	Param2: Maximum number
	OK	of Bluetooth device
		Responses
AT LINOM9		Param3: Maximum query
AT+ INQM?		timeout
		Timeout range: 1 to 48
		(recombination time: 1.28
		seconds to 61.44 seconds)
		Default: 1, 1, 48

Example:

AT+INQM=1,9,48r,——Query mode setting: with RSSI signal strength indication, more than 9 Bluetooth devices Response

To terminate the query, set the timeout to 48xl. 28=61.44 seconds. OK AT+INQM\r\n +INQM: 1, 9, 9, 48

ОК

12. Settings / Query - Pairing Code:

Command	Response	Parameter
AT+PSWD= <param/>	OK	ריים מ <u>ו</u>
AT+ PSWD?	+ PSWD : <param/> OK	Param: Pairing code Default name:"1234"

13. Setup / Query - Serial Parameters:

Command	Response	Parameter
AT+UART= <param/> , <param2>,<param3></param3></param2>	OK	Param1: baud rate
	+UART= <param/> , <param2>,</param2>	(bits/s)
	<param3></param3>	The values are as
	OK	follows (decimal):
AT+ UART?		4800
		9600
		19200

	38400
	57600
	115200
	23400
	460800
	921600
	1382400
	Param2: stop bit
	0 - 1 bit
	1 - 2 digits
	Param3: check
	digit
	0——None
	1 - Odd
	2——Even
	Default setting:
	9600, 0, 0

Example: Set the serial port baud rate: 115200, 2 stop bits, Even check AT+UART=115200,1,2,\r\n OK AT+UART? +UART: 115200, 1, 2 OK

14. Settings / Query - Connection Mode:

Command	Response	Parameter
AT+CMODE= <param/>	ОК	Param:
AT+CMODE= <param/> AT+ CMODE?	OK + CMODE: <param/> OK	Param: 0 - specify the Bluetooth address connection mode (Specify the Bluetooth address set by the binding Command) 1any Bluetooth address connection mode (not bound by the address set by the bound Command) 2 - Loopback role (Slave-Loop)
		Default connection mode: 0

15. Set / Query - Bind Bluetooth Address:

Bluetooth address representation method: NAP: UAP: LAP (hexadecimal)

Command	Response	Parameter
AT+BIND= <param/>	OK	Param - Bind Bluetooth
AT+ BIND?	+ BIND: <param/>	address

OK	Default binding Bluetooth
	address:
	00:00:00:00:00:00

Bluetooth address representation method: NAP: UAP: LAP (hexadecimal)

Binding Command is only valid when the Bluetooth address connection mode is specified!

for example:

In the specified Bluetooth address connection mode, bind the Bluetooth device address: 12:34:56:ab:cd:ef

The command and Response are as follows:

AT+BIND=1234,56,abcdef\r\n OK AT+BIND?\r\n

+BIND:1234:56:abcdef OK

16. Setup / Query - LED ind	icates drive and connection st	atus output polarity:

Command	Response	Parameter
AT+POLAR= <param1>,</param1>	ОК	Param1: The value is as
<param1></param1>		follows
	+ POLAR= <param1>,</param1>	0——PI08 output low level
	<param1></param1>	LED
	ОК	1——PI08 output high level
		LED
		Param2: The value is as
AT+ BIND?		follows
		0——PI09 output low level
		indicates connection Success
		1——PI09 output high level
		indicates connection Success
		Default setting: 1,1

HC-05 Bluetooth module definition: PI08 output drive LED indicates working status; PI09 output indicates connection status.

for example:

PI08 output low level LED, PI09 output high level indicates connection Success. The command and Response are as follows:

AT+POLAR=0,1\r\n OK AT+POLAR?\r\n +POLAR=0,1 OK

17. Set PIO single port output:

	Command	Response	Parameter
--	---------	----------	-----------

		Param1: PIO port number
AT+PIO= <param1>, <param2></param2></param1>	OK Param2: PIO por 0low	(decimal number)
		Param2: PIO port output status
		0——low level
		1 - high level

The HC-05 Bluetooth module provides users with PIO port resources: PIOO~PIO7 and PIO10, which users can use to expand the input. Output port. for example: 1. PIO10 port output high level AT+PIO=10,1\r\n OK 2. PIO10 port output high level AT+PIO=10,0\r\n OK

18. Set PIO multiport output:

Command	Response	Parameter
		Param: PIO port serial number
AT+MPIO= <param/>	ОК	mask combination (decimal
		number)

The HC-05 Bluetooth module provides users with PIO port resources: PIO0~PIO7 and PIO10, which can be used by the user to expand the input. Output port.

PIO port number mask = (1<< port number)

PIO port number mask combination = (PIO port number mask 1 | PIO port number mask 2 |) Such as: PI02 port mask = (1<<2) =0x004 PI010 port mask = (1<<10)=0x400 PIO2 and PIO10 port mask combination = (0x004|0x400) = 0x404 for example: 1. PI010 and PI02 port output high level AT+MPI0=404\r\n OK 2. PIO4 port output high level AT+PI0=004\r\n OK 3. PI010 port output high level AT+PI0=400\r\n OK 4. All ports output low level AT+MPI0=0\r\n OK

19. Query PIO port input:

Command	Response	Parameter
		Param - PIO port value
		(16bits)
		Param[0]=PI00
AT+MPIO?	+MPIO: <param/>	Param[1]=PI01
	OK	Param[2]=PI02
		Param[10]=PI010
		Param[11]=PI011

The HC-05 Bluetooth module provides users with PIO port resources: PI00~PI07 and PI010~PI011, which can be used by the user to expand the input and output ports.

20. Settings / Query - Page Scan, Query Scan Parameters:

Command	Response	Parameter
		Param1: Query interval
$\Delta T + IDSC \Delta N = \langle Darrown 1 \rangle$	OK	Param2: Query duration
AT+IPSCAN= <param1>,</param1>	+IPSCAN: <param1>,</param1>	Param3: paging interval
<param2>,</param2>	<param2>,</param2>	Param4: paging duration
<param3>, <param4></param4></param3>	<param3>, <param4></param4></param3>	The above Parameters are all
AT+IPSCAN?	ОК	decimal numbers.
		Default: 1024, 512, 1024, 512

for example: At+ipscan=1234,500,1200,250\r\n OK At+ipscan? +IPSCAN: 1234, 500, 1200, 250

21. Settings / Query - SHIFF energy saving parameters:

	0/ 01	
Command	Response	Parameter
AT+SNIFF= <param1>,</param1>		Param1: maximum time
<param2>,</param2>	OK	Param2: minimum time
<param3>, <param4></param4></param3>		Param3: Try time
	+SNIFF: <param1>,</param1>	Param4: Timeout
	<param2> ,</param2>	The above Parameters are all
AT+IPSCAN?	<param3>, <param4></param4></param3>	decimal numbers.
		Default: 0,0,0,0

22. Set/Query Security and Encryption Mode:

Command	Response	Parameter
AT+SENM= <param/> , <param2>,</param2>	1. OK——Success	Param: Safe mode, the values are
	2. FAIL——Failure	as follows:

		0sec_mode0+off
		1sec_mode1+non_secure
		2sec_mode2_service
		3sec_mode3_link
	+	4sec_mode_unknown
AT+ SENM?	SENM: <param/> , <para< td=""><td>Param2 encryption mode, the</td></para<>	Param2 encryption mode, the
AIT SEINM?	m2>,	values are as follows:
	OK	0hci_enc_mode_off
		1hci_enc_mode_pt_to_pt
		2hci_enc_mode_pt_to_pt_and_b
		cast
		Default: 0,0

23. Remove the specified authentication device from the Bluetooth pairing list:

Command	Response	Parameter
AT+PMSAD= <param/>	OK	Param: Bluetooth device
		address

for example:

Remove the device with the Bluetooth address: 12:34:56:ab:cd:ef from the pairing list

At+rmsad=1234,56,abcdef\r\n

OK - delete Success

or

At+rmsad=1234,56,abcdef\r\n

FAIL - 12:34:56:ab:cd:ef Bluetooth device does not exist in the pairing list

24.	Remove all Authenticated Devices from the Bluetooth	pairing list:

Command	Response	Parameter
AT+RMAAD	ОК	/

for example:

Remove all Bluetooth devices from the pairing list

At+rmaad\r\n

ОК

25. Find the specified authentication device from the Bluetooth pairing list:

Command	Response	Parameter
AT+FSAD= <param/>	1. OK——Success	Param: Bluetooth device
	2. FAIL——Failure	address

for example:

Find Bluetooth devices from the pairing list: 12:34:56:ab:cd:ef

At+fsad=1234,56,abcdef\r\n

OK - There is a 12:34:56:ab:cd:ef Bluetooth device in the pairing list.

At+fsad=1234,56,abcde0\r\n

FAIL - There is no 12:34:56:ab:cd:e0 Bluetooth device in the pairing list.

26	Obtain the number of	of authenticated	devices in the Blu	etooth pairing list.
20.		or authenticated	ucvices in the blu	cioun paning iist.

Command	Response	Parameter
AT+ADCN?	+ADCN: <param/>	Param: Number of Bluetooth
	OK	devices in the pairing list

for example:

At+adcn?

+ADCN: 0 - no Bluetooth device in the pairing trust list OK

27. Obtain the most recently used Authenticated Device:

Command	Response	Parameter
AT+MRAD?	+ MRAD : <param/>	Param: Recently used
	ОК	Bluetooth device address

for example:

At+mrad?

+MRAD: 0:0:0 - no trusted Bluetooth devices have been used recently OK

28. Get the working status of the Bluetooth module:

Command	Response	Parameter
AT+STATE?	+ STATE: <param/> OK	Param: module working status The return value is as follows: "INITIALIZED"initial state "READY" - ready state "PAIRABLE" - pairable status "PAIRED" - pairing status "INQUIRING" - query status "CONNECTING" - the connection status "CONNECTED" - connection status "DISCONNECTED" - disconnected state "NUKNOW" - unknown state

for example: At+state? +STATE:INITIALIZED - Initialization state

ОК

29. Initialize the SPP specification library:

Command	Response	Parameter
AT+INIT	1. OK——Success	/
	2. FAIL——Failure	/

30. Query Bluetooth devices:

Command	Response	Parameter
AT+INQ	+INQ: <param1>, <param2>, <param3>, OK</param3></param2></param1>	Param1: Bluetooth address Param2: device class Param3: RSSI signal strength

Example 1:

At+initrn - Initialize the SPP library (cannot be initialized repeatedly) OK

At+iac=9e8b33\r\n - Query the Bluetooth device of any access code OK

At+class=0\r\n - query various Bluetooth device classes

At+inqm=1,9,48\r\n ——Query mode: with RSSI signal strength indication, more than 9 Bluetooth devices Response will terminate the query, set the super

The time is 48x1.28=61.44 seconds.

At+inq\r\n - Query peripheral Bluetooth devices

+INQ: 2:72:D2224,3E0104,FFBC

```
+INQ: 1234:56:0,1F1F,FFC1
```

```
+INQ:1234:56:0,1F1F,FFC0
```

```
+INQ: 1234:56:0,1F1F,FFC1
```

```
+INQ: 2:72:D2224,3F0104,FFAD
```

```
+INQ: 1234:56:0,1F1F, FFBE
```

```
+INQ: 1234:56:0,1F1F, FFC2
```

```
+INQ: 1234:56:0,1F1F, FFBE
```

```
+INQ: 2:72:D2224,3F0104,FFBC
```

ОК

Example 2:

At+iac=9e8b33\r\n - Query the Bluetooth device of any access code

OK

At+class=1f1f $r\n - Query$ the Bluetooth device with device class 0x1f1f OK

At+inqm=1,9,48\r\n ——Query mode: with RSSI signal strength indication, more than 9 Bluetooth devices Response will terminate the query, set the super

The time is 48x1.28=61.44 seconds.

At+inq\r\n - Filter. Query peripheral Bluetooth devices

+INQ: 1234:56:0,1F1F, FFC2

```
+INQ: 1234:56:0,1F1F,FFC1
+INQ: 1234:56:0,1F1F,FFC1
+INQ: 1234:56:0,1F1F,FFC1
+INQ: 1234:56:0,1F1F,FFC2
+INQ: 1234:56:0,1F1F,FFC1
+INQ: 1234:56:0,1F1F,FFC1
+INQ:1234:56:0,1F1F,FFC0
+INQ: 1234:56:0,1F1F,FFC2
OK
```

Example 3:

At+iac=9e8b3f \r \n — Query the Bluetooth device with access code 0x9e8b3f OK

At+class=1f1f\r\n - Query the Bluetooth device with device class 0x1f1f OK

At+inqm=1,1,20 $r\n - Query$ mode: with RSSI signal strength indication, more than 1 Bluetooth device Response will terminate the query, set the super

The time is 20x1.28=25.6 seconds.

At+inq\r\n - Filter. Query peripheral Bluetooth devices

+INQ:1234:56:ABCDEF,1F1F,FFC2

ОК

31. Cancel the inquiry of Bluetooth devices:

Command	Response	Parameter
AT+INQC	ОК	/

32. Device pairing:

Command	Response	Parameter
AT+PAIR= <param1>,<param2></param2></param1>		Param1: Remote device
	1. OK——Success	Bluetooth address
	2. FAIL——Failure	Param2: Connection timeout
		(seconds)

for example:

Paired with a remote Bluetooth device: 12:34:56:ab:cd:ef, the maximum pairing timeout is 20 seconds.

At+pai=1234,56,abcdef,20\r\n OK

33. Equipment connection:

Command	Response	Parameter
AT+LINK= <param/>	1. OK——Success	Param: Remote device
	2. FAIL——Failure	Bluetooth address

for example:

Establish a connection with the remote Bluetooth device: 12:34:56:ab:cd:ef

At+fsad=1234,56,abcdef\r\n—Query whether the Bluetooth device 12:34:56:ab:cd:ef is in the pairing list OK

At+link=1234,56,abcdefrn--Query the Bluetooth device 12:34:56:ab:cd:ef in the pairing list, you can connect directly without query. OK

34. Disconnect:

Command	Response	Parameter	
AT+DISC	1. +DISC:SUCCESS - Disconnect Success		
	ОК		
	2. +DISC: LINK_LOSS - connection lost		
	ОК		
	3. +DISC: NO_SLC - no SLC connection	1	
	ОК	/	
	4. +DISC: TIMEOUT - disconnect timeout		
	ОК		
	5. +DISC:ERROR - disconnect error		
	ОК		

35. Enter the energy saving mode:

Command	Response	Parameter
AT+ENSNIFF= <param/>	OK	Param: Device Bluetooth
		address

36. Exit the energy saving mode:

Command	Response	Parameter
AT+EXSNIFF= <param/>	ОК	Param: Device Bluetooth
		address

Appendix 1: ATCommand Error Code Description

Error code return form - ERROR: (error_code)

error_code (hexadecimal number)	Comment
0	AT command error
1	Command result is the default value
2	PSKEY write error
3	Device name is too long (more than 32 bytes)
4	Device name length is zero
5	Bluetooth address: NAP is too long
6	Bluetooth address: UAP is too long
7	Bluetooth address: LAP is too long
8	PIO sequence number mask length is zero
9	Countless PIO serial numbers

Device class length is zero	
Device class number is too long	
Query access code length is zero	
The query access code number is too long	
Invalid query access code	
Pairing code length is zero	
Pairing code is too long (more than 16 bytes)	
Module role is invalid	
Invalid baud rate	
Invalid stop bit	
Check digit is invalid	
No authentication device exists in the pairing	
list	
SPP library is not initialized	
SPP library repeated initialization	
Invalid query mode	
Query timeout too large	
Bluetooth address is zero	
Invalid security mode	
Invalid encryption mode	

Appendix 2: Device Class Description

The Class of Device/Service(COD) is a 32 bifs number that of 3 field specifies the service supported by the device. Another field spcifies the minor device class, which descrbes the device type in more detail

The Class of Device /Service (CoD) field has a variable format. The format is indicated using the 'within the CoD .The length of the Format Type field is variable and ends with two bits different from'11'.The version field starts at the least significant bit of the CoD and may extend upwards. In the 'format#1' of the CoD (format Type field =00), 11 bits are assigned as a bit –mask(mulfiple bits can be set) each bit corresponding to a high level generic category of service class. Currently 7 categories are defined. These are primarily of a' public service' nature. The remaining 11 bits are used to indicate device type category and other device-specific characteristics. Any reserved but otherwise unassigned bits, such as in the Major Service Class field, should be to 0.

Figure 1.2: The Class of Device/Service field (format type). Please note the krder in which the octets are sent on the air and stored in memory. Bit number 0 is sent first on the air .

1. MAJOR SERVICE CLASSES

Bit no Major Service Class

13 Limited Discoverable Mode [Ref #1]

- 14 (reserved)
- 15 (reserved)

16 Positioning(Location identification)

17 Networking (LAN,Ad hoc, …)

18 Rendering (Printing ,Speaker,...

19 Capturing (Scanner, Misrophone, ...

20 Object Transfer (v-Inbox, v-Folder,...

21 Audio (Speaker, Microphone, Headset service, ...

22 Telephony (Cordless telephony, Modem, Headset service,...

23 Imformation (WEB-server, WAP- server,...

TABLE 1.2:MAJOR SERVICE CLASSES

[Ref #1 As defined in See Generic Access Profile, Bluetooth SIG]

2. MAJOR DEVICE CLASSES

The Major Class segment is the highest level of granularity for defining a Bluetooth Device. The main function of a device is used to determine the major Class grouping. There are 32 different possible major classes. The assignment of this Major Class field is defined in Table1.3.

12111098 Major Device Class

0000 Miscel laneous [Ref #2]

00001 Computer (desktop, notebook, PDA, organizers,...

0 0 0 1 0 Phone (cellular ,cordless ,payphone,modem,...

00011 LAN/Network Access point

0 0 1 0 0 Audio/Video (headset, speaker, stereo, video display, vcr ...

00101 Periphereal (mouse, joystick, keyboards....

00110 Imaging (printing, scanner, camera, display,...

1 1 1 1 1 Uncategorized, specific device code not specified

X X X X All other values reserved

TABLE 1.3: MAJOE DEVICE CLASSES

[Ref #2:Used where a more specific Major Device Class is not suited (but only as specifiedas in this document) .Devices that do not have a major class assigned can use the all-1 code until' classified']

3. THE MINOR DEVICE CLASS FIELD

The' Minor Device Class field' (bits 7 to 2 in the CoD), are to be interpreted only in the context of the Major Device Class (but interpreted of the Service Class field). Thus the meaning of the bits may change, depending on the value of the ' Major Device Class field'. When the Minor Device Class field indicates a device class ,then the primary decvice class should be reported, e.g. a cellular phone that can work as a cordless handset should

4. MINOR DEVICE CLASS FIELD-COMPUTER MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code for device nof assigned

00001 Desktop workstation

000010 Server-class computer

0 0 0 0 1 1 Laptop

000100 Handheld PC/PDA(clam shell)

000101 Palm sized PC/PDA

0 0 0 1 1 0 Wearable computer (Watch sized)

X X X X X All other values reserved

TABLE 1.4: SUB DEVICE CLASS FIELD FOR THE' COMPUTER 'MAJOR CLASS

5. MINOR DEVICE CLASS FIELD - PHONE MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code for device not assigned

000001 Cellular

0 0 0 0 1 0 Cordless

000011Smart phone

000100 Wired modem or voice gateway

000101 Common ISDN Access

000110 Sim Card Reader

X X X X X All other values reserved

TABLE1.5: SUB DEVICE CLASSES FOR THE'PHONE' MAJOR CLASS

6. MINOR DEVICE CLASS FIELD -LAN/NETWORK ACCESS POINE MAJOR CLASS

Minor Device Class

7 6 5 bit no of CoD

000 Fully available

- 0 0 1 1 17% utilized
- 0 1 0 1 7 33% utilized
- 0 1 1 3 3 50% utilized
- 10050–67% utilized
- 10167-83% utilized
- 1 1 0 8 3 99% utilized

1 1 1 No service available [REF #3]

XXX All other values reserved

TABLE1.6: THE LAN/NETWORK ACCESS POINE LOAD FACTOR FIELD

[Ref #3:"Device is fully utilized and cannot accept additional connections at this time, please retry later"]

The exact loading formula is not standardized. It is up to each LAN/Network Access Point implementation to determine what internal conditions to report as a utilization of communication requirement is that the box .As a recommendation, a client that locates multiple LAN/Network Access Points should attempt to connect to the one reporting the lowest load.

Minor Device Class

4 3 2 bit no of CoD

0 0 0 Uncategorized (use this value if no other apply)

XXX All other values reserved

TABLE1.7:RESERVED SUB-FIELD FOR THE LAN/NETWORK ACCESS POINE

7. MINOR DEVICE CLASS FIELD – AUDIO/VIDEO MAJOR CLASS

Minor Device Class

7 6 5 4 3 2 bit no of CoD

0 0 0 0 0 0 Uncategorized, code not assigned

0 0 0 0 0 1 Device conforms to the Headset profile

000010 Hands-free

000011 (Reserved)

000100 Microphone

000101 Loudspeaker

000110 Headphones

000111 Portable Audio

0 0 1 0 0 0 Car audio

0 0 1 0 0 1 Set-top box

001010 HiFi Audio Device

001011 VCR

001101Camcorder

001110 Video Monitor

001111 Video Display and Loudspeaker

0 1 0 0 0 0 Video Conferencing

010001 (Reserved)

0 1 0 0 1 0 Gaming/Toy [Ref #4]

X X X X X All other values reserved

[Ret #4: Only to be used with a Gaming/Toy device that makes audio/video capabilities

available via Bluetooth]

TABLE 1.8: SUB DEVICES FOR THE AUDIO/VIOEO MAJOR CLASS

8. MINOR DEVICE CLASS FIELD – PERIPHERAL MAJOR CLASS

Minor Device Class

7 6 bit no of CoD

0 1 Keyboard

1 0 Pointing device

1 1 Combo keyboard /pointing device

X X X All other values reserved

TABLE1.9: THE PERIPHERAL MAJOR CLASS KEYBOARD/POINTING DEVICE FIELD

Bits 6 and 7 independantly specify mouse, keyboard or combo mouse/keyboard devices.

These may be combined with the lower bits in a multifunctional decice.

Minor Device Class

5 4 3 2 bit no of CoD

0 0 0 0 Uncategorized device

0 0 0 1 Gamepd

0011 Remote control

0 1 0 0 Sensing device

0101 Digitizer tablet

X X X X All other values reserved

TABLE1.10: RESERVED SUB-FIELD FOR THE DEVICE TYPE

9. MINOR DEVICE CLASS FIELD - IMAGING MAJOR CLASS

Minor Device Class

7 6 5 4 bit no of CoD X X X 1 Display X X 1 X Camera X 1 X X Scanner 1 X X X Printer X X X All other values reserved TABLE 1.11: THE TMAGING MAJOR CLASS BITS 7 TO 7 Bits 4 to 7 independent ly specify bi splay, camera, scanner or printer. These may be combined in a multifunctional device. Minor Device Class 3 2 bit no of CoD 0 0 Uncategorized, default X X All other values reserved TABLE 1. 12: THE IMAGING MAJOR CLASS BITS 2 AND 3 Bits 2 and 3 are reserved

Appendix 3: The Inquiry Access Codes

The General-and Device-Specific Inquiry Access Codes (DIACs) The Inquiry Access Code is the first level of filtering when finding Bluetooth The main purpose of defining multiple IACs is to limit the number of Reply that are received when scanning devices within range. 0. 0x9E8B33 -- General/Unlimited Inquiry Access Code (GIAC) 1. 0x9E8B00 - Limited Dedicated Inquiry Access Code (LIAC) 2. 0x9E8B01 ~ 0x9E8B32 RESERVED FOR FUTURE USE 3. 0x9E8B34 ~ 0x9E8B3F RESERVED FOR FUTURE USE The Limited Inquiry Access Code(LIAC) is only intended to be used for limited time Periods in scenarios where both are have been explicitly caused to enter this state, Usually by user action. For further explanation of the use of the LIAC, please refer

To the Generic Access Profile.

In contrast it is allowed to be continuously scanning for the General Inquiry Access Code (GIAC) and respond whenever inquired.